

## Smart Projector

Classroom B has an Epson EB-760Wi smart projector with two smart pens that allows you project from the computer and switch to a digital whiteboard.

Please ask an OLLI staff member to show you where the smart pens are located, if you don't see them.




## Using the Whiteboard



1. Using the Smart Pen, in the lower right corner of the projection, click the up/down arrow icon.
2. On the toolbar that appears, tap the **Whiteboard** icon.




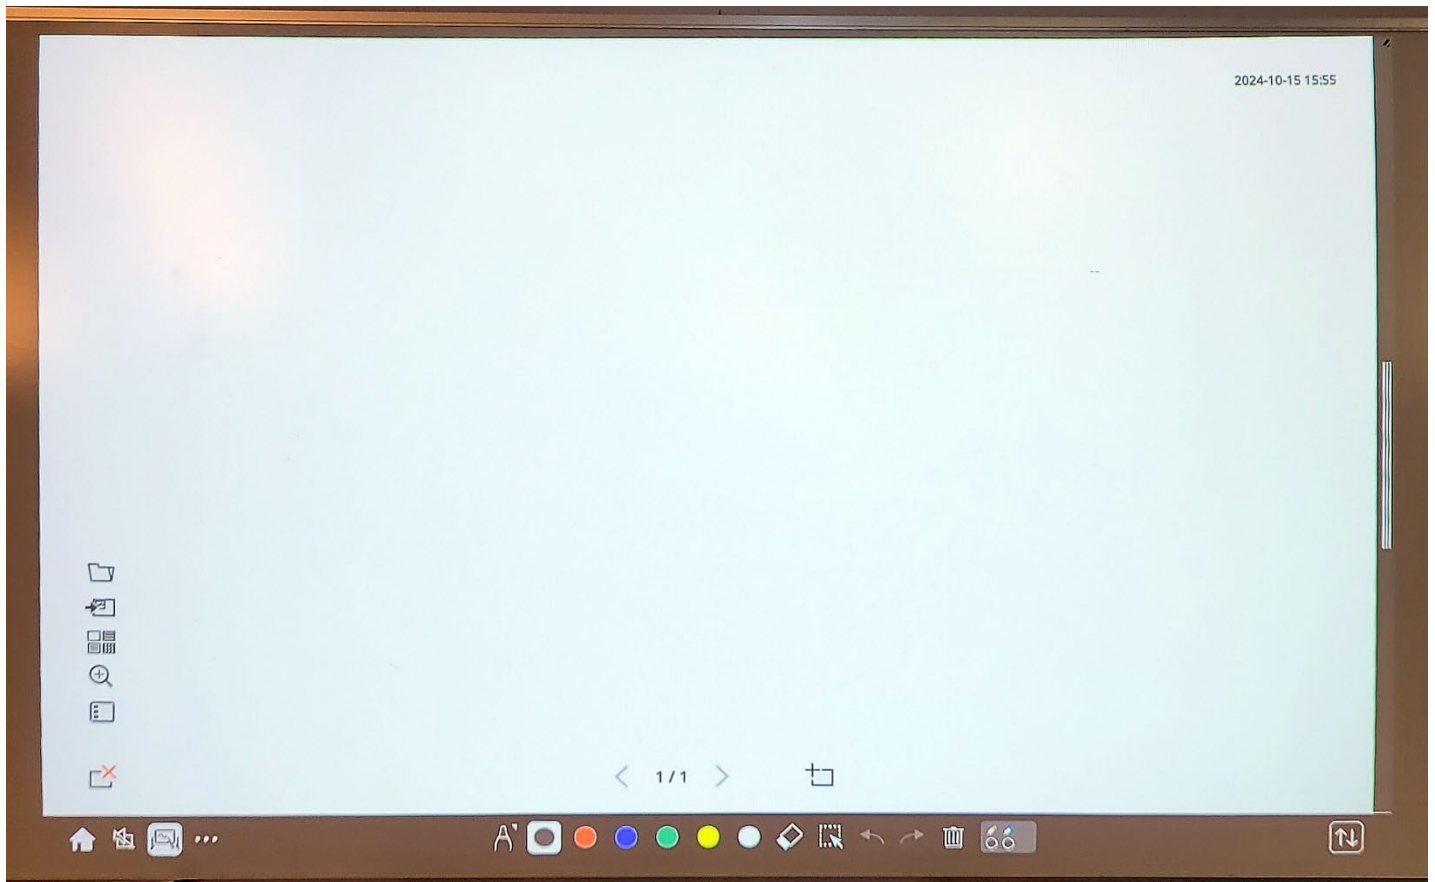

3. The screen changes to the whiteboard and the toolbar changes to whiteboard mode. The tools you are most likely to use are labeled below.
4. If the toolbar disappears, tap the up/down arrow icon with the smart pen.



5. To return to the projection screen, tap the **Home** icon with the Smart Pen.

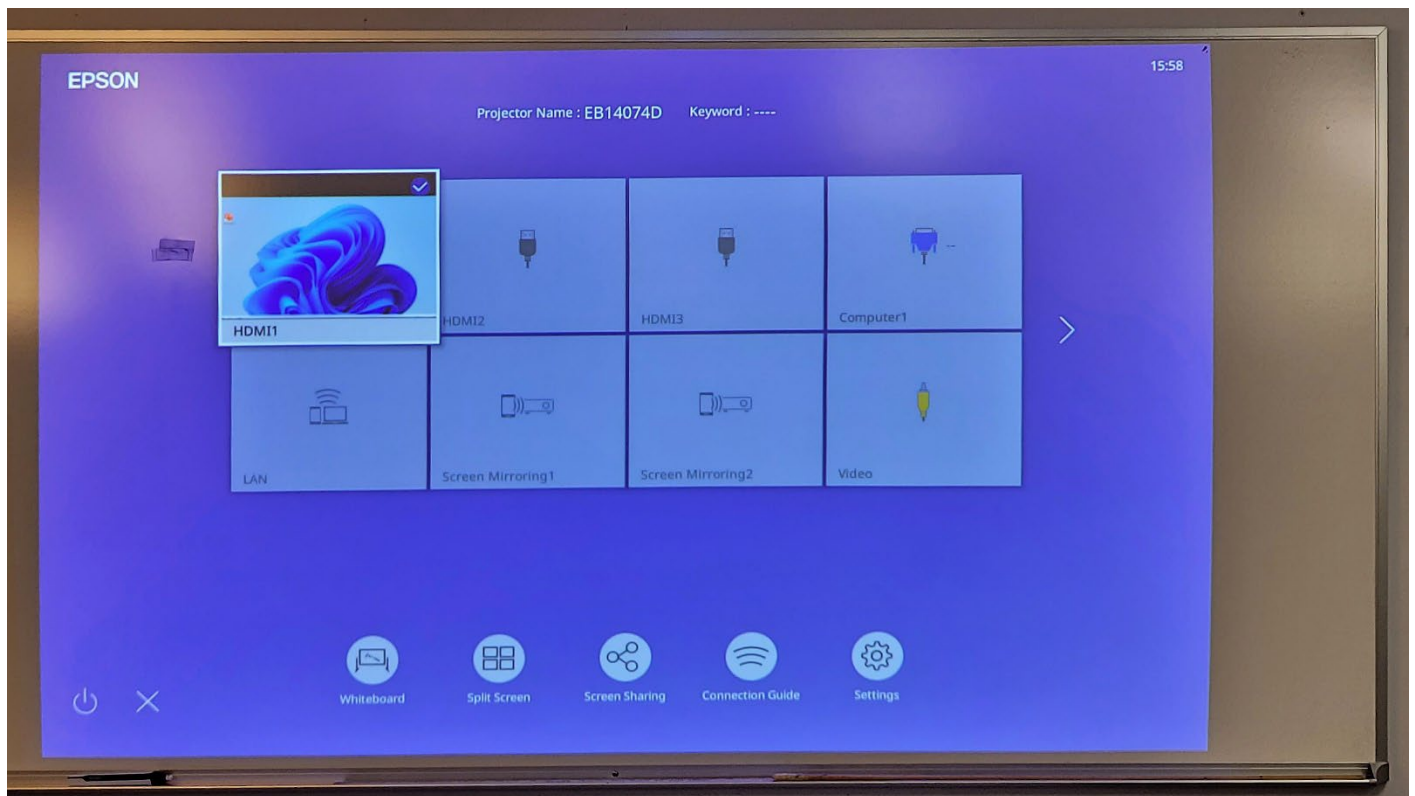

6. In the selection screen that appears, tap **HDMI1**.

## From the Epson Manual

